

# INTERNAL BLINDS

## INSTRUCTIONS FOR USE

### CORD BREAK AND A TILT WAND OPERATION

#### RAISING AND LOWERING THE BLINDS:

Before raising or lowering your blinds, make sure that all slats are horizontal. To lower your blinds, pull the cord RIGHT or LEFT (depending on the position of the cord break) and let the cord evenly slide through your fingers as it feeds up toward the top of the blinds. When the slats reach the desired level, pull the cord to LEFT or RIGHT (depending on the position of the cord break) and release it to lock the cord break so that the blinds remain at the desired level.

To raise your blinds, pull the cord RIGHT or LEFT (depending on the position of the cord break) and the pull the cord down. When the slats reach the desired level, pull the cord LEFT or RIGHT (depending on the position of the cord break) and release it so that the cord break locks the blinds at the desired level.

#### SHADING:

To shade your space, turn the tilt wand LEFT or RIGHT to set the desired lighting.



Cord + Tilt wand

### CORD BREAK AND A PVC GEARBOX OPERATION


#### RAISING AND LOWERING THE BLINDS:

Before raising or lowering your blinds, make sure that all slats are horizontal. To lower your blinds, pull the cord RIGHT or LEFT (depending on the position of the cord break) and let the cord evenly slide through your fingers as it feeds up toward the top of the blinds. When the slats reach the desired level, pull the cord to LEFT or RIGHT (depending on the position of the cord break) and release it to lock the cord break so that the blinds remain at the desired level.

To raise your blinds, pull the cord RIGHT or LEFT (depending on the position of the cord break) and the pull the cord down. When the slats reach the desired level, pull the cord LEFT or RIGHT (depending on the position of the cord break) and release it so that the cord break locks the blinds at the desired level.

#### SHADING:

To shade your space, turn the PVC tilt wand LEFT or RIGHT to set the desired lighting.

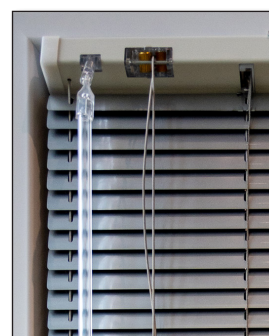

PVC gearbox

### CHAIN OPERATION - IZO INTERNAL BLINDS

IZO internal blinds are operated with a chain. Take the chain out of the holder and gently pull it in the desired direction UP or DOWN to lower, raise and tilt the blinds.



Chain

### OPERATION TOP DOWN INTERNAL BLINDS

The internal Top-down blind is raised or lowered using the handle on the profile. Shading is adjusted by turning the rotary knob.



Handle on profile, knob


## INTERNAL BLINDS

### MEINTENANCE

- Internal blinds do not require any mechanical maintenance.
- Clean the blinds as needed using a blind duster or a damp cloth, applying moderate pressure to avoid damaging the slats, ladders, and cords.

### WARNING!

- Small children can suffocate with loops created by cords or chains that are installed to operate the blinds.
- To avoid suffocation and preventing children to tie the cord or chain around the neck, keep cords and chains out of their reach.
- Move beds and other furniture away from blinds to limit access to cords and chains.
- Do not tie the cords together. Make sure that the cords do not wrap around and create a loop.
- Install / use the provided safety devices for cords or chains in accordance with the instructions for use, as this can prevent the possibility of accidental suffocation (meets the requirements of the standard EN 13120: 2009 + A1: 2014).
- If the safety device or any other mechanisms are damaged, replace it immediately and do not use the blinds until the damage is repaired.

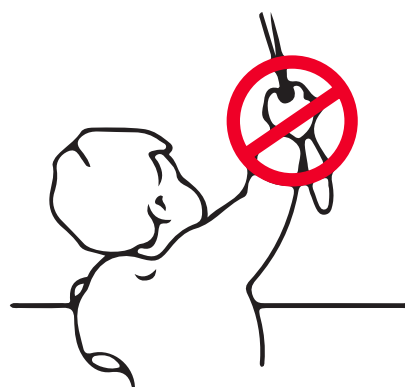

**SHADES ARE NOT TOYS. DO NOT ALLOW CHILDREN OR PERSONS IRRESPONSIBLE TO PLAY WITH IT.**

Children and persons not capable of assessing the dangers of using internal shades incorrectly must not operate them. Parent or persons responsible must follow the instructions issued by the manufacturer to ensure their safety.

### WARRANTY TERMS AND CONDITIONS

- The warranty period for the products (internal blinds) of Roletarstvo Medle is 24 months.
- During the warranty period, the manufacturer will repair or replace defective parts of their products at his own expense.
- The warranty period starts on the date of the issue of invoice.
- The warranty applies to products installed by Roletarstvo Medle, d.o.o., and for products installed by the customer, but only if the customer installed the products correctly and in accordance with the technical regulations and instructions of the manufacturer.
- For products not installed by Roletarstvo Medle, the repairs are provided only in the company's workshops or a part is delivered to the customer free of charge for him to replace the defective part.
- The warranty does not exclude the consumer's rights arising from the seller's responsibility for defects in goods.
- The warrant does not apply to damages caused by improper handling or any mechanical damage to the product.
- The warranty for the products of Roletarstvo Medle is valid in the EU.
- Our products comply with the EU Construction products regulation.
- Company Roletarstvo Medle operates according to the ISO 9001: 2015 standard.